

[Instruction Set](#) > [Motion Group Instructions](#) > Motion Group Stop (MGS)

Search

- ▷ [Quick Start Steps](#)
- ▷ [Logix Designer](#)
- ▷ [Module Information](#)
- ◀ [Instruction Set](#)

[Logix 5000 Controllers](#)

[Instruction and Application Considerations](#)

[Logix Designer Application Instruction Set](#)

[Interpret the Attribute Tables](#)

[Array Concepts](#)
- ▷ [CIP Axis Attributes](#)
- ▷ [Module Configuration](#)

[Attributes](#)

[Bit Addressing](#)

[Common Attributes](#)

[Data Conversions](#)

[Elementary data types](#)

[LINT data types](#)

[Floating Point Values](#)

[Immediate values](#)

[Index Through Arrays](#)

[Math Status Flags](#)

[Motion Error Codes \(.ERR\)](#)

[Structures](#)
- ▷ [Equipment Sequence instructions](#)
- ▷ [Equipment Phase Instructions](#)
- ▷ [Alarm Instructions](#)
- ▷ [Advanced Math Instructions](#)
- ▷ [Array_\(File\)/Misc Instructions](#)
- ▷ [Array_\(File\)/Shift Instructions](#)
- ▷ [ASCII Conversion Instructions](#)
- ▷ [ASCII Serial Port Instructions](#)
- ▷ [ASCII String Instructions](#)
- ▷ [Bit Instructions](#)
- ▷ [Compare Instructions](#)
- ▷ [Debug Instructions](#)
- ▷ [Drives Instructions](#)
- ▷ [Drive Safety Instructions](#)
- ▷ [For/Break Instructions](#)
- ▷ [Filter Instructions](#)
- ▷ [Function Block Attributes](#)
- ▷ [Structured Text Attributes](#)
- ▷ [Compute/Math Instructions](#)
- ▷ [Move/Logical Instructions](#)
- ▷ [Input/Output Instructions](#)
- ▷ [License Instructions](#)
- ▷ [Math Conversion Instructions](#)
- ▷ [Metal Form Instructions](#)
- ▷ [Motion Configuration](#)

Motion Group Stop (MGS)

This information applies to the CompactLogix 5370, ControlLogix 5570, Compact GuardLogix 5370, GuardLogix 5570, Compact GuardLogix 5380, CompactLogix 5380, CompactLogix 5480, ControlLogix 5580, and GuardLogix 5580 controllers.

The Motion Group Stop (MGS) instruction initiates a stop of all motion in progress on all axes in the specified group by a method configured individually for each axis or as a group via the Stop Mode of the MGS instruction. If the MGS Stop Mode is specified as Programmed, each axis in the group is stopped according to the configured Programmed Stop Mode axis attribute. This is the same stopping mechanism that is employed by the Logix Operating System when there is a Logix controller state change. This Programmed Stop Mode attribute currently provides five different methods of stopping an axis:

- Fast Stop
- Fast Disable
- Hard Disable
- Fast Shutdown
- Hard Shutdown

Alternatively, an explicit Stop Mode may be selected by using the MGS instruction. If a Stop Mode of Fast Disable is selected, all axes in the group stop with Fast Disable behavior. When the motion of all the axes in the group has been brought to a stop, the Process Complete (PC) bit is set in the control structure.

Available Languages

Ladder Diagram



Function Block

This instruction is not available in function block.

Structured Text

MGS(Group,MotionControl, StopMode);

Operands

Ladder Diagram and Structured Text

Operand	Type	Format	Description
Group	MOTION_GROUP	Tag	Name of the group of axes to perform operation on
Motion Control	MOTION_INSTRUCTION	Tag	Structure used to access instruction status parameters.

Stop Mode	UDINT	Immediate	<div>Controls how the axes in the group are stopped. Select one of the following methods:</div> <div>0 = Programmed - each axis is stopped according to how the individual axis has been configured.</div> <div>1 = Fast Stop - each axis in the group is decelerated at the Maximum Deceleration rate and the stopped axis is left in the Servo Active state.</div> <div>2 = Fast Disable - each axis in the group is decelerated at the Maximum Deceleration rate and the stopped axis is placed in the Axis Ready state.</div>
-----------	-------	-----------	---

See *Structured Text Syntax* for more information on the syntax of expressions within structured text.

For the operands that require you to select from available options, enter your selection as:

This Operand Has These Options Which You

	Enter as Text	Or Enter as a Number
StopMode	programmed	0
	faststop	1
	fastdisable	2

MOTION_INSTRUCTION Structure

Mnemonic	Description
.DN (Done) Bit 29	It is set when the group Programmed Stop has been successfully initiated for all axes in the group.
.ER (Error) Bit 28	It is set to indicate that the instruction detected an error, such as if you specified an unconfigured group.
.IP (In Process) Bit 26	It is set on positive rung transition and cleared after the Motion Group Stop is complete.
.PC (Process Complete) Bit 27	It is set after all the axes in group have been successfully brought to a stop according to each axis’ Programmed Stop Mode configuration.

Description

With the Stop Mode parameter set for Programmed, the MGS instruction brings motion for all of the axes in the specified group to a stop according to the configured Programmed Stop Mode for each axis. If the axis has both single axis motion moves and coordinated moves occurring, the MGS stops the single axis motion using the axis’

Instructions

- ▷ [Motion Event Instructions](#)
- ◀ [Motion Group Instructions](#)
 - [Motion Group Shutdown \(MGSD\)](#)
 - [MGSD Flow Chart \(True\)](#)
 - [Motion Group Shutdown Reset \(MGSR\)](#)
 - [MGSR Flow Chart \(True\)](#)
 - [Motion Group Stop \(MGS\)](#)
 - [MGS Flow Chart \(True\)](#)
 - [Motion Group Strobe Position \(MGSP\)](#)
 - [MGSP Flow Chart \(True\)](#)
- ▷ [Motion Move Instructions](#)
- ▷ [Motion State Instructions](#)
- ▷ [Multi-Axis Coordinated Motion Instructions](#)
- ▷ [Logical and Move Instructions](#)
- ▷ [Program Control Instructions](#)
- ▷ [Sequencer Instructions](#)
- ▷ [Special Instructions](#)
- ▷ [Timer and Counter Instructions](#)
- ▷ [Trigonometric Instructions](#)
- ▷ [Process Control Instructions](#)
- ▷ [Select/Limit Instructions](#)
- ▷ [Sequential Function Chart \(SFC\) Instructions](#)
- ▷ [Statistical Instructions](#)
- ▷ [Safety Instructions](#)
- ▷ [Studio 5000 Logix Designer Glossary](#)

maximum deceleration rate and stops the coordinated axes motion using the coordinate system’s maximum deceleration rate. A trapezoidal profile is always used for the deceleration regardless of the programmed profile type.

The MGS instruction initiates the same programmed stopping action that is automatically applied when the processor’s operating system changes operating mode (for example, Run Mode to Program Mode). This is particularly useful in designing custom motion fault handlers.

If the MGS Stop Mode parameter is set to Fast Stop, each axis in the group is forced to perform a Fast Stop process, regardless of the configured Programmed Stop Mode. Each axis in the group is decelerated at the Maximum Deceleration rate and, once stopped, the axis is left in the Servo Active state.

If the MGS Stop Mode parameter is set to Fast Disable, each axis in the group is forced to perform a Fast Disable process, regardless of the configured Programmed Stop Mode. Each axis in the group is decelerated at the Maximum Deceleration rate and, once stopped, placed into the Axis Ready (servo inactive and drive disabled) state.

The MGS instruction currently supports five Programmed Stop Action modes:

- Fast Stop
- Fast Disable
- Hard Disable
- Fast Shutdown
- Hard Shutdown

Each axis may be configured to use any of these five stop modes. The following is a description of the effect of each these five stopping modes as they apply to an individual axis in the specified group.

Mode	Description
Fast Stop	<p>For an axis configured for a Fast Stop the MGS instruction initiates a controlled stop much like that initiated by an MAS instruction. In this case the Motion Group Stop (MGS) instruction brings the axis motion to a controlled stop without disabling the axis servo loop. It is useful when a fast decelerated stop the axis is desired with servo control retained.</p> <p>The MGS instruction uses the configured Maximum Deceleration of the axis to stop only the single axis motion.</p> <p>The coordinated move portion of the axis uses the coordinated system configured Maximum Deceleration to stop the axis.</p> <p>If the coordinate system contains orientation axes, configured Maximum Orientation Deceleration is used to stop orientation axes.</p> <p>When a Fast Stop is used to stop a Motion Drive Start (MDS) instruction, the Direct Command feature is disabled. Additionally, the affected axis decelerates to a stop using its ramp deceleration.</p>

Fast Disable	<p>For an axis configured for a Fast Disable the MGS instruction initiates a controlled stop much like that initiated by an MAS instruction with the exception that the drive is disabled when the axis comes to a stop. Use MGS when a fast decelerated stop the axis is desired before the drive is disabled.</p> <p>The MGS instruction uses the configured Maximum Deceleration of the axis to stop only the single axis motion.</p> <p>The coordinated move portion of the axis uses the coordinated system configured Maximum Deceleration to stop the axis.</p> <p>If the coordinate system contains orientation axes, configured Maximum Orientation Deceleration is used to stop orientation axes.</p> <p>CIP Motion</p> <p>When a Fast Disable is issued and a Direct Velocity command is issued via the MDS instruction, the CIP axis is disabled when all planned motion is stopped. However, in this case, the drive device continues coasting or stopping according to its Stop Action selection.</p>
Hard Disable	<p>For an axis configured for a Hard Disable the MGS instruction initiates the equivalent of an MSF instruction to the axis. This action immediately turns the appropriate axis drive output off, and disables the servo loop. Depending on the drive configuration, this may result in the axis coasting to a stop but offers the quickest disconnect of drive output power.</p> <p>When a Hard Disable is used to stop a Motion Drive Start (MDS) instruction, the Direct Command feature is disabled. Additionally, the affected axis is immediately disabled.</p>
Fast Shutdown	<p>For an axis configured for a Fast Shutdown, the MGS instruction initiates a Fast Stop and then applies the equivalent of a Motion Axis Shutdown (MASD) instruction to the axis. This action turns the appropriate axis driver output OFF, disables the servo loop, opens any associated motion module’s OK contacts, and places the axis into the Shutdown state.</p> <p>When a Fast Shutdown is used to stop a Motion Drive Start (MDS) instruction, the Direct Command feature is disabled. Additionally, the affected axis decelerates to a stop using its ramp deceleration is immediately shutdown.</p>
Hard Shutdown	<p>For an axis configured for a Hard Shutdown the MGS instruction initiates the equivalent of an Motion Axis Shutdown (MASD) instruction to the axis. This action turns the appropriate axis drive output OFF, disables the servo loop, opens any associated motion module OK contacts, and places the axis into the Shutdown state. Depending on the drive configuration, this may result in the axis coasting to a stop but offers the quickest disconnect of Drive power via the OK contacts.</p> <p>To successfully execute a MGS instruction, the targeted group must be configured.</p> <p>When a Hard Shutdown is used to stop a Motion Drive Start (MDS) instruction, the Direct Command feature is disabled. Additionally, the affected axis is immediately shutdown.</p> <p>Important: The instruction execution may take multiple scans to execute because it requires multiple coarse updates to complete the request. The Done (.DN) bit is not set immediately, but only after the request is completed.</p>

In addition to the ways the various stopping modes affect the Motion Drive Start (MDS) instruction were described in the previous table, all these modes also clear the MDS In Process (.IP) bit and clear the DirectVelocityControlStatus bit in the Motion Status

attribute.

This is a transitional instruction:

- In relay ladder, toggle Rung-condition-in from false to true each time the instruction should execute.

Master Driven Speed Control (MDSC) and the MGS Instruction

If an MGS is issued when in Master Driven Mode, a switch is made to Time Driven Mode and the axes are stopped in Time Driven Mode.

The IP bit of the Master Driven Axis Control (MDAC) and Master Driven Coordinate Control (MDCC) instructions are reset.

The AC bit of the MDAC and MDCC instructions are reset when the axis is stopped as the group is shutdown.

The status bit CalculatedDataAvailable in an active motion instruction status word for an MAM, MCLM or MCCM instruction is cleared when an MCS is executed (goes IP). The CalculatedData is not recomputed.

The MGS instruction clears the pending Master Axis for all future single and coordinated motion instructions.

Affects Math Status Flags

No

Major/Minor Faults

None specific to this instruction. See *Common Attributes* for operand related faults.

Execution

Ladder Diagram

Condition/State	Action Taken
Prescan	The .EN, .DN, .ER, and .IP bits are cleared to false.
Rung-condition-in is false	The .EN bit is cleared to false if either the .DN or .ER bit is true.
Rung-condition-in is true	The .EN bit is set to true and the instruction executes.
Postscan	N/A

Structured Text

Condition/State	Action Taken
Prescan	See Prescan in the Ladder Diagram table.
Normal execution	See Rung-condition-in is false, followed by rung is true in the Ladder Diagram table.
Postscan	See Postscan in the Ladder Diagram table.

Status Bits

STATUS BITS

MGS Changes to Single Axis Status Bits

If the Stop Type is	Then		
NOT All	The instruction clears the Motion Status bit for the motion process that you stopped.		
All	The instruction clears all Motion Status bits.		
	Bit Name	State	Meaning
	MoveStatus	FALSE	Axis is not Moving.
	JogStatus	FALSE	Axis is not Jogging.
	GearingStatus	FALSE	Axis is not Gearing.
	HomingStatus	FALSE	Axis is not Homing.
	StoppingStatus	TRUE	Axis is not Stopping.
	PositionCamStatus	FALSE	Axis is not Position Camming.
	TimeCamStatus	FALSE	Axis is not Time Camming.
	PositionCamPendingStatus	FALSE	Axis does not have a Position Cam Pending.
	TimeCamPendingStatus	FALSE	Axis does not have a Time Cam Pending.
	GearingLockStatus	FALSE	Axis is not in a Gear Locked condition.
	PositionCamLockStatus	FALSE	Axis is not in a Cam Locked condition.
	DirectVelocityControlStatus	FALSE	Axis is not under Direct Velocity Control.
	DirectTorqueControlStatus	FALSE	Axis is not under Direct Torque Control.

Example

When the input conditions are true, the controller stops motion on all axes in group1.
After the controller stops all motion, the axes are inhibited.

Ladder Diagram



Structured Text

MGS(Motion,MGG_1,Programmed);

See also

[Motion Drive Start \(MDS\)](#)

[MGS Flow Chart \(True\)](#)

[Motion Error Codes \(.ERR\)](#)

[Motion Group Instructions](#)

[Common Attributes](#)